



BEAMZ
MADE
EAZY

150.382 V2.1

FUZE75S

QUICK START GUIDE

CONTROL MENU


MENU				DESCRIPTION
DMX ADDR	A000-Axxx			DMX address setting
AUTO PLAY	Auto run	Internal program 1-9	Master/Alone	Auto program
	Music Run	Internal program 1-9	Master/Alone	Music Control
RESET	ALL Reset	On / Off		ALL Reset
	Scan Reset	On / Off		Scan Reset
	Color Reset	On / Off		Color Reset
	GOBO Reset	On / Off		GOBO Reset
	Other Reset			Other Reset
REVERSE PAN	On / Off			Reverse Pan
REVERSE TILT	On / Off			Reverse Tilt
SPECIAL	To default	On / Off		Reset Default
	Calibrat	Code		Calibration code
		PAN, TILT, Color Wheel, Gobo Wheel 1, Gobo Wheel 2, Focus, Prism		Calibration of the channel
	Temperatur	xxx °C / F		Current temperature
	Manual Ctrl	PAN = xxx		Manual control
	Mic SET	0-99%		Sensitivity of mic
	RF Remote	On / Off		Switch remote control function on /off
DMX MODE	13CH MODE			Standard Mode
	11CH MODE			Basic Mode
SCAN DEGREE	PAN Degree	630° / 540° / 360°		Select TILT Degree, default is 540°
	TILT Degree	270° / 180° / 90°		Select PAN Degree, default is 270°
VERSION	Vx.xx			Software version

DMX CHANNELS

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION
1	1	PAN	000-255	PAN movement
2		PAN FINE	000-255	Fine control of Pan movement
3	2	TILT	000-255	Tilt movement
4		TILT FINE	000-255	Fine control of Tilt movement
5	3	COLOR WHEEL	000-014	Open /White
			015-029	Color 1
			030-044	Color 2
			045-059	Color 3
			060-074	Color 4
			075-089	Color 5
			090-104	Color 6
			105-119	Color 7
			120-127	Color 8
			128-189	Forwards rainbow effect from fast to slow
			190-193	Color rotation stop
			194-255	Backwards rainbow effect from slow to fast
6	4	GOBO WHEEL	000-009	Open
			010-019	Gobo 1
			020-029	Gobo 2
			030-039	Gobo 3
			040-049	Gobo 4
			050-059	Gobo 5
			060-069	Gobo 6
			070-089	Gobo 1 shake, slow to fast
			090-109	Gobo 2 shake, slow to fast
			110-129	Gobo 3 shake, slow to fast
			130-149	Gobo 4 shake, slow to fast
			150-169	Gobo 5 shake, slow to fast
			170-189	Gobo 6 shake, slow to fast
			190-255	Rot. gobo wheel cont. rotation slow to fast
7	5	SHUTTER	000-031	Shutter closed
			032-063	Shutter open
			064-095	Strobe, slow to fast
			096-127	Shutter open
			128-144	Pulse-effect in sequences, slow to fast
			145-159	Pulse-effect in sequences, fast to slow
			160-191	Shutter open
			192-223	Strobe random, slow to fast
			224-255	Shutter open
8	6	DIMMER	000-255	Intensity 0-100%
9	7	FOCUS	000-255	In (near) to out (far)
10	8	PRISM	000-005	Prism OFF
			006-255	Prism ON
11	9	GOBO / PRISM ROTATION	000-003	No function
			004-127	Forwards gobo & prism rotation from fast to slow
			128-131	Gobo / Prism rotation, stop
			132-255	Backwards gobo & prism rotation from slow to fast

12	10	PAN / TILT SPEED	000-225	Max to min speed
			226-235	Blackout by movement
			236-245	Blackout by wheel changing
			246-255	No function
13	11	SPECIAL FUNCTIONS	000-019	No function
			020-029	No function
			030-039	No function
			040-079	No function
			080-084	All Motor reset
			085-087	Scan motor reset
			088-090	Colors motor reset
			091-093	Gobo motor reset
			094-096	No function
			097-099	Other motor reset
			100-119	Internal program 1
			120-139	Internal program 2
			140-159	Internal program 3
			160-179	Internal program 4
			180-199	Internal program 5
			200-219	Internal program 6
			220-239	Internal program 7
240-255	Internal Sound program 1			

GOBO WHEEL

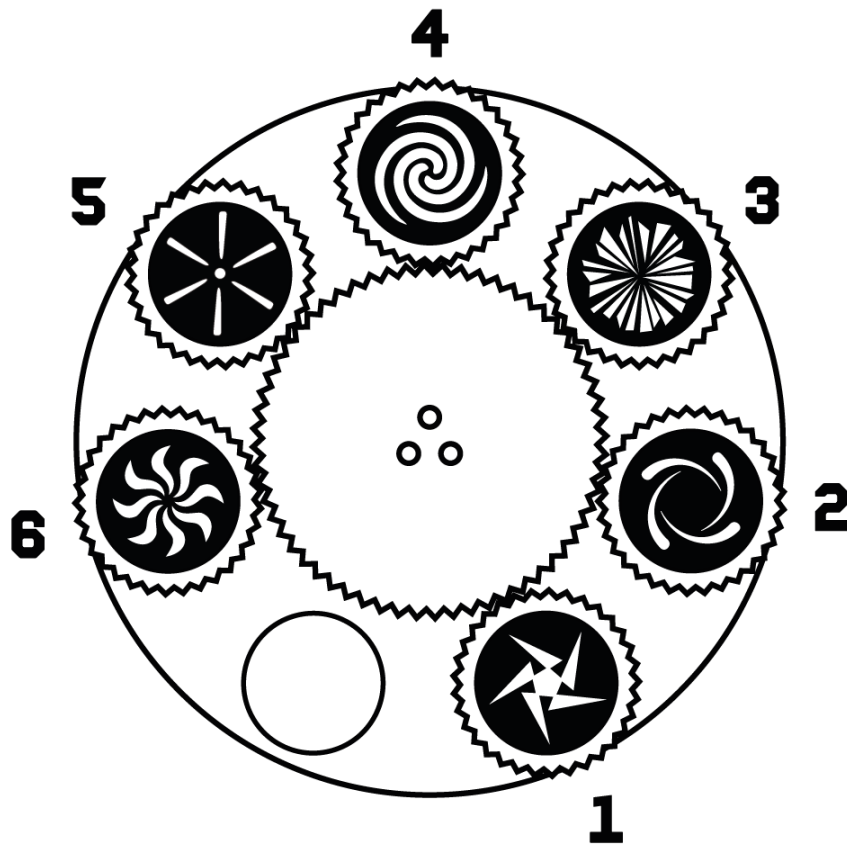



A series of horizontal dotted lines for writing, spanning the width of the page.



A series of horizontal dotted lines for writing, spanning the width of the page.





A series of horizontal dotted lines for writing, spanning the width of the page.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

