

## DMX CHANNELS

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION
1	1	Pan	000-255	Movement 0°-540°
2		Pan fine	000-255	
3	2	Tilt	000-255	Movement 0°-270°
4		Tilt fine	000-255	
5	3	Colour	000-007	Open
			008-014	Yellow
			015-021	Red
			022-028	Blue
			029-035	Green
			036-042	Magenta
			043-049	Deep Blue
			050-056	Orange
			057-066	Open + Yellow
			067-076	Yellow + Red
			077-086	Red + Blue
			087-096	Blue + Green
			097-106	Green + Magenta
			107-116	Magenta + Deep Blue
			117-127	Deep Blue + Orange
			128-189	Colour wheel rotation, slow to fast CW
			190-193	Colour wheel rotation, stop
			194-255	Colour wheel rotation, slow to fast CCW
6	4	Gobo	000-007	Open
			008-015	Gobo 1
			016-023	Gobo 2
			024-031	Gobo 3
			032-039	Gobo 4
			040-047	Gobo 5
			048-055	Gobo 6
			056-063	Gobo 7
			064-071	Open
			072-079	Gobo 1 Shake
			080-087	Gobo 2 Shake
			088-095	Gobo 3 Shake
			096-103	Gobo 4 Shake
			104-111	Gobo 5 Shake
			112-119	Gobo 6 Shake
			120-127	Gobo 7 Shake
			128-189	Gobo wheel rotation, slow to fast CW
			190-193	Gobo wheel rotation, stop
			194-255	Gobo wheel rotation, slow to fast CCW

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION
7	5	Shutter	000-007	Shutter closed
			008-015	Shutter open
			016-131	Strobe, slow to fast
			132-139	Shutter open
			140-181	Fast close and slow open
			182-189	Shutter open
			190-231	Fast open and slow close
			232-239	Shutter open
			240-247	Random strobe
			248-255	Shutter open
8	6	Dimmer	000-255	Intensity 0-100%
9	7	Pan/Tilt Speed	000-255	Fast to slow
10	8	Function	000-069	No function
			070-079	Blackout while pan/tilt move
			080-089	No function
			090-099	Blackout when colour changes
			100-109	No function
			110-119	Blackout when gobo changes
			120-199	No function
			200-209	Reset all
			210-249	No function
			250-255	Sound active
11	9	Dim modes	000-020	Standard
			021-040	Stage
			041-060	TV
			061-080	Architectural
			081-100	Theatre
			101-255	Standard

## REMOTE CONTROL

To control the Moving Head easily via the supplied remote control, you must aim the remote at the front of the fixture and be no more than 30 feet away.

**STAND BY** - Press this button to activate the Moving head.

**FULL ON** - Press this button to switch on the LED illumination. You must hold the button, then all LEDs will go on.

**GOBO** - Press this button to select the individual gobo via 1-9 buttons.

**SOU/TILT** - By means this button allows you to switch between fast and slow pan / tilt movements.

**"DIMMER +" and "DIMMER -"** - Press this button to adjust the brightness level.

**STROBE** - Press this button to activate the strobe function. You have 2 strobe effects. Short press functions as a flash function. If you want a strobe, you'll need to hold the button.

**COLOR** - Press this button to select the individual colour via 1-9 buttons. (1 Red; 2 Green; 3 Blue; 4 White, 5 Yellow, 6 Magenta, 7 Cyan, 8 Pink, 9 White all colours on). Adjust the brightness level via "DIMMER +" and "DIMMER -".

**SOUND ON & OFF** - These buttons activate and deactivate the sound active mode.

**SHOW** - Press this button to active the show mode. Use the 1-4 buttons to select your desired built-in programs.

