



**BEAMZ**  
**MADE**  
**EAZY**

150.460 V2

**PANTHER 25**

**QUICK START GUIDE**

# DMX CHANNELS

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION
1	1	Pan	000-255	Movement 0°-540°
2		Pan fine	000-255	
3	2	Tilt	000-255	Movement 0°-270°
4		Tilt fine	000-255	
5	3	Colour	000-007	White
			008-014	Red
			015-021	Yellow
			022-028	Cyan
			029-035	Green
			036-042	Pink
			043-049	Orange
			050-056	Blue
			057-066	White + Red
			067-076	Red + Yellow
			077-086	Yellow + Cyan
			087-096	Cyan + Green
			097-106	Green + Pink
			107-116	Pink + Orange
			117-127	Orange + Blue
			128-189	Colour wheel rotation, slow to fast CW
			190-193	Colour wheel rotation, stop
			194-255	Colour wheel rotation, slow to fast CCW
			6	4
008-015	Gobo 1			
016-023	Gobo 2			
024-031	Gobo 3			
032-039	Gobo 4			
040-047	Gobo 5			
048-055	Gobo 6			
056-063	Gobo 7			
064-071	Open			
072-079	Gobo 1 shake			
080-087	Gobo 2 shake			
088-095	Gobo 3 shake			
096-103	Gobo 4 shake			
104-111	Gobo 5 shake			
112-119	Gobo 6 shake			
120-127	Gobo 7 shake			
128-189	Gobo wheel rotation, slow to fast CW			
190-193	Gobo wheel rotation, stop			
194-255	Gobo wheel rotation, slow to fast CCW			

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION
7	5	Shutter	000-007	Shutter closed
			008-015	Shutter open
			016-131	Strobe effect, slow to fast
			132-139	Shutter open
			140-181	Fast close, slow open
			182-189	Shutter open
			190-231	Fast open, slow close
			232-239	Shutter open
			240-247	Random strobe
			248-255	Shutter open
8	6	Master dimmer	000-255	Dimmer 0-100%
9	7	Pan /Tilt speed	000-255	Speed 0-100%
10	8	Function	000-069	No function
			070-079	Black out by Pan/Tilt moves
			080-089	No function
			090-099	Black out by colour changes
			100-109	No function
			110-119	Black out by gobo changes
			120-199	No function
			200-209	Reset all
			210-249	No function
			250-255	Sound active mode
11	9	Dim mode	000-020	Standard
			021-040	Stage
			041-060	TV
			061-080	Architectural
			081-100	Theatre
			101-255	Standard

## REMOTE CONTROL

**STAND BY** - Press this button to activate the Moving head.

**FULL ON** - Press this button to switch on the LED illumination. You must hold the button, then all LEDs will go on.

**GOBO** - Press this button to select the individual gobo via 1-9 buttons.

**SOU/TILT** - By means this button allows you to switch between fast and slow pan / tilt movements.

**'DIMMER +' AND 'DIMMER -'** - Press this button to adjust the brightness level.

**STROBE** - Press this button to activate the strobe function. You have 2 strobe effects. Short press functions as a flash function. If you want a strobe, you'll need to hold the button.

**COLOR** - Press this button to select the individual colour via 1-9 buttons. (1 Red; 2 Green; 3 Blue; 4 White, 5 Yellow, 6 Magenta, 7 Cyan, 8 Pink, 9 White all colours on). Adjust the brightness level via "DIMMER +" and "DIMMER -".

**SOUND ON & OFF** - These buttons activate and deactivate the sound active mode.

**SHOW** - Press this button to active the show mode. Use the 1-4 buttons to select your desired built-in programs.





# BEAMZ

**YOUR FUTURE**  
**YOUR SKILLS**  
**YOUR PLATFORM**  
**YOUR PARTY**  
**YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

