



BEAMZ
MADE
EAZY

151.341 V1.2

BT430 PAR STOBE
QUICK **START GUIDE**

CONTROL MENU

MENU			DESCRIPTION		
MODE	ADDR	VALU	A001-Axxx	DMX address setting	
		SLAV		Stand alone mode	
	AUTO	IPI-8	ALON (AU-A)	SP_1-5	Pre program (alone) with speed adjustment
			MAST (AU-M)		Auto run (master) with speed adjustment
	SOUN	IPI-5	ALON (SO-A)		Sound control (alone)
MAST (SO-M)				Sound setting (master)	
SET	MIC	M-xx		Microphone sensitivity	
	LODA	On/Off		Reload data	
	VER	V-x.x		Software version	
	CALI	Code			Input password (Beamz authorization only)
		CH03-CH04			LED Temperature calibration
	FREQ	Low/High			PWM Frequency Set
DMX	CH16			DMX 16 channel mode	
	CH07			DMX 7 channel mode	
REST	On/Off			Reset to factory default	
NANU	Cxxx	000-255		Manual control cool white LED	
	Uxxx	000-255		Manual control warm white LED	
TEMP	Txxx			Current temperature	


DMX CHANNELS

7 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master dimmer 0-100%
2	Strobe	000-031	No function
		032-063	Full on
		064-095	Strobe effect slow to fast
		096-127	Full on
		128-159	Pulse-effect in sequences slow to fast
		160-191	Full on
		192-223	Random strobe effect slow to fast
		224-255	Full on
		3	Warm White
4	Cold White	000-255	Cold white dimmer 0-100%
5	Colour Temperature	000-015	No function
		016-045	Below 3200K
		046-075	3200K - 3500K
		076-105	3500K - 5000K
		106-135	5000K - 5500K
		136-165	5500K - 6000K
		166-195	6000K - 6500K
		196-225	6500K - 7000K
		226-255	7000K - 8000K
6	Macro Run	000-015	No function
		016-026	Macro run 1
		027-038	Macro run 2
		039-050	Macro run 3
		051-062	Macro run 4
		063-074	Macro run 5
		075-086	Macro run 6
		087-098	Macro run 7
		099-110	Macro run 8
		111-122	Macro run 9
		123-134	Macro run 10
		135-146	Macro run 11
		147-158	Macro run 12
		159-170	Macro run 13
		171-182	Macro run 14
		183-194	Macro run 15
		195-206	Macro sound 1
207-218	Macro sound 2		
219-230	Macro sound 3		
231-242	Macro sound 4		
243-255	Macro sound 5		
7	Macro Run speed	000-255	Macro speed from slow to fast

16 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master dimmer 0-100%
2	Strobe	000-031	No function
		032-063	Full on
		064-095	Strobe effect slow to fast
		096-127	Full on
		128-159	Pulse-effect in sequences slow to fast
		160-191	Full on
		192-223	Random strobe effect slow to fast
		224-255	Full on
3	Warm White	000-255	Warm white dimmer 0-100%
4	Cold White	000-255	Cold white dimmer 0-100%
5	Colour Temperature	000-015	No function
		016-045	Below 3200K
		046-075	3200K - 3500K
		076-105	3500K - 5000K
		106-135	5000K - 5500K
		136-165	5500K - 6000K
		166-195	6000K - 6500K
		196-225	6500K - 7000K
6	Macro Run	000-015	No function
		016-026	Macro run 1
		027-038	Macro run 2
		039-050	Macro run 3
		051-062	Macro run 4
		063-074	Macro run 5
		075-086	Macro run 6
		087-098	Macro run 7
		099-110	Macro run 8
		111-122	Macro run 9
		123-134	Macro run 10
		135-146	Macro run 11
		147-158	Macro run 12
		159-170	Macro run 13
		171-182	Macro run 14
		183-194	Macro run 15
		195-206	Macro sound 1
207-218	Macro sound 2		
219-230	Macro sound 3		
231-242	Macro sound 4		
243-255	Macro sound 5		
7	Macro Run speed	000-255	Macro speed from slow to fast



CHANNEL	FUNCTION	VALUE	DESCRIPTION
8	Ring 1	000-255	Dimmer 0-100% Warm White
9	Ring 2	000-255	Dimmer 0-100% Cold White
10	Ring 3	000-255	Dimmer 0-100% Warm White
11	Ring 4	000-255	Dimmer 0-100% Cold White
12	Ring 5	000-255	Dimmer 0-100% Warm White
13	Ring 6	000-255	Dimmer 0-100% Cold White
14	Ring 7	000-255	Dimmer 0-100% Warm White
15	Ring 8	000-255	Dimmer 0-100% Cold White
16	Ring 9	000-255	Dimmer 0-100% Warm White

REMOTE CONTROLLER

1. SWITCHING THE LEDS ON AND OFF

The LEDs can be switched on with the button ON and switched off with the button OFF.

2. ADJUST BRIGHTNESS AND SPEED

Use the buttons and to adjust the brightness for the static colours or speed in program mode.

3. SELECT WARM WHITE OR COOL WHITE

R: Warm White

G: Cool White

B: Warm White + Cool White

W: Warm White + Cool White

4. COLOUR BUTTONS

Press one of the twelve colour buttons to select a built-in programme.

5. SELECTING AN INTERNAL PROGRAM

FLASH: Colour switch

STROBE: Colour strobe



FADE: Colour fade

SMOOTH: Colour switch and strobe



CAUTION The remote control is supplied with a battery inserted. An insulating foil between the battery and the battery contacts prevents the battery from being discharged during storage. Prior to the first operation remove the foil from the battery support on the rear side of the remote control. Otherwise operation of the remote control is not possible.

If the range of the remote control decreases, replace the battery. For this purpose, on the rear side of the remote control press the small bar with the groove to the right (1) and at the same time remove the battery support (2). For operation, one 3 V button cell type CR 2025 is required. When inserting, pay attention that the positive pole of the button cell shows upwards in the support.

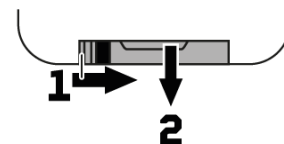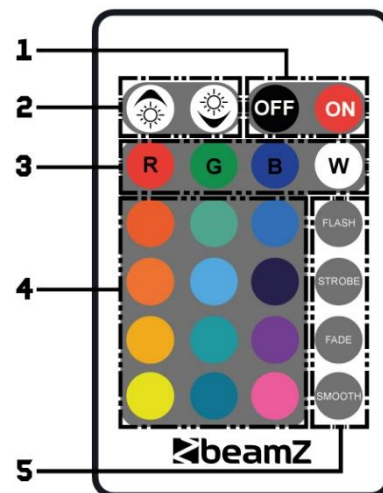



A series of horizontal dotted lines for writing, spanning the width of the page.



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

