



BEAMZ
MADE
EAZY

152.092 V1.2

IGNITE400

QUICK START GUIDE


CONTROL MENU

MENU	SUB MENU	SETTINGS	DESCRIPTION	
SETTINGS	DMX ADDRESS	001-512		
		FIXTURE SET	Dmx Mode 25CH	
			Run Mode DMX/Host	
		Pan Invert	Close/Open	
		Tilt Invert	Close/Open	
		Dimmer Fast	Close/Open	
		No DMX State	Clear/Keep	
		Exit		
	DISPLAY	Language	CH/EN	
		Display Flip	Close/Open	
		Display Mode	60S/Show	
		Exit		
	RESET	XY Reset	Cancel/Run	
		Motor Reset	Cancel/Run	
		All Reset	Cancel/Run	
		Factory	Cancel/Run	
		Exit		
		EXIT		
	INFO	TIME	Current Time	xxxxxH
			Total Time	xxxxxH
Power Count			xxxxxH	
SENSOR		Pan		
			
SOFTWARE VERSION		Panel	Vxx.x	
		XY	Vxx.x	
		Motor	Vxx.x	
		EXIT		
MANUAL		PAN	000-255	
	PAN FINE	000-255		
	000-255		
	EXIT			
FACTORY	PASSWORD	000-255		
	PAN	000-255		
	TILT	000-255		
	000-255		
	EXIT			

DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	PAN	000-255	Pan
2	PAN FINE	000-255	Pan fine
3	TILT	000-255	Tilt
4	TILT FINE	000-255	Tilt fine
5	SPEED	000-255	P/t speed
6	MACRO FUNCTION	000-199	Reserve
		200-209	XY reset
		210-219	Effect reset
		220-229	All reset
		230-255	Reserve
7	SHUTTER	000-003	Closed
		004-103	Strobe slow to fast
		104-107	Open
		108-207	Invert strobe slow to fast
		208-212	Open
		213-251	Random strobe slow - fast
		252-255	Open
8	DIMMER	000-255	Master dimmer
9	CMY-C	000-255	Linear cyan
10	CMY-M	000-255	Linear magenta
11	CMY-Y	000-255	Linear yellow
12	CTO	000-255	Linear CTO
13	COLOR WHEEL	000-004	White
		005-009	White+ Color 1
		010-014	Color 1
		015-019	Color 1+ Color 2
		020-024	Color 2
		025-029	Color 2 + Color 3
		030-034	Color 3
		035-039	Color 3 + Color 4
		040-044	Color 4
		045-049	Color 4 + Color 5
		050-054	Color 5
		055-059	Color 5 + Color 6
		060-064	Color 6
		065-069	Color 6 + Color 7
		070-074	Color 7
		075-079	Color 7 + Color 8
		080-084	Color 8
085-089	Color 8 + Color 9		
14	GOBO WHEEL 1	090-170	Fast rotation - slow rotation
		171-174	Stop
		175-255	Slow rotation - fast rotation
		000-009	White 1
		010-019	White 2
		020-029	Gobo 1
		030-039	Gobo 2
		040-049	Gobo 3
		050-059	Gobo 4
		060-069	Gobo 5

		070-079	Gobo 6
		080-089	Gobo 7
		090-099	Gobo 8
		100-109	Gobo 9
		110-119	Gobo 1 jitter
		120-129	Gobo 2 jitter
		130-139	Gobo 3 jitter
		140-149	Gobo 4 jitter
		150-159	Gobo 5 jitter
		160-169	Gobo 6 jitter
		170-179	Gobo 7 jitter
		180-189	Gobo 8 jitter
		190-199	Gobo 9 jitter
		200-225	Fast rotation - slow rotation
		226-229	Stop
		230-255	Slow rotation - fast rotation
15	GOBO WHEEL 2	000-005	White 1
		006-009	White 2
		010-019	Gobo 2 -1
		020-029	Gobo 2 -2
		030-039	Gobo 2 -3
		040-049	Gobo 2 -4
		050-059	Gobo 2 -5
		060-069	Gobo 2 -6
		070-079	Gobo 2 -7
		080-089	Gobo 2 -8
		090-099	Gobo 2 -1 jitter
		100-109	Gobo 2 -2 jitter
		110-119	Gobo 2 -3 jitter
		120-129	Gobo 2 -4 jitter
		130-139	Gobo 2 -5 jitter
		140-149	Gobo 2 -6 jitter
		150-159	Gobo 2 -7 jitter
		160-169	Gobo 2 -8 jitter
		170-213	Fast rotation - slow rotation
		214-255	Slow rotation - fast rotation
16	GOBOWHEEL 2 ROTATIE	000-127	Linear
		128-190	Fast rotation - slow rotation
		191-192	Stop
		193-255	Slow rotation - fast rotation
17	PRISMA 1	000-255	Prism-1
18	PRISMA/ ROTATING	000-128	Rotation
		129-191	Slow rotation - fast rotation
		192-193	Stop
		194-255	Slow rotation - fast rotation
19	PRISMA 2	000-255	Prism-2
20	PRISMA/ ROTATING	000-128	Rotation
		129-191	Slow rotation - fast rotation
		192-193	Stop
		194-255	Slow rotation - fast rotation



21	FROST	000-127	Reserve
		128-255	Frost
22	FOCUS	000-255	Focus
23		000-255	Focus fine
24	ZOOM	000-255	Linear zoom
25		000-255	Zoom fine



A series of horizontal dotted lines spanning the width of the page, intended for handwriting practice.





A series of horizontal dotted lines for writing, spanning the width of the page.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!

