



BEAMZ
MADE
EAZY

152.540_152.542_152.543_152.546 V1.0

PHOENIX

QUICK START GUIDE

CONTROL MENU



MENU	SUB MENU	THIRD SUB MENU
FUNCTION MODE	DMX-512 mode	
	Auto mode	
	Music mode	
SHOW LISTING	Select List	(Play a show list)
	All the list/001	
PLAYING SHOW	Select Show	(Play a specific show in the selected list)
	All the show/001-255	
PLAY SETUP	Play speed	Select playing speed of the show (Default speed is 50%.)
	Play mode	Loop play
		Random play
ADDRESS SETUP	Address setup 001	(Set DMX address)
CHANNEL SETUP	Normal mode	(10 channels for Normal Mode)
	Expert mode	(34 channels for Expert Mode)
LASER SETUP	Scanner speed	Default setting 25kpps (Scanner speed can be set up to 40kpps. Pls set the correct speed, in case to fail the scanner.)
	Color	1. Single (7 single colors)
		2. RGY
		3. RBP
		4. GBC
		5. RGB (default setting)
		6. WYPC
	Laser (modulation)	Analog (default setting)
		TTL
	Invert	Normal
		Invert X
		Invert Y
		Invert XY
	Image size	Size X
		Size Y
Position setup	Position X	
	Position Y	
GENERAL SETUP	Reset default	YES / NO
	Safety protected (one beam protection)	Turn On
		Turn Off (Default setting)
	Master setup	TURN ON / TURN OFF
	Back light	ON
		Delay 15s OFF
	Display setup (change LCD display)	Rotate 180 deg
		Normal display
About system		

REMOTE CONTROL



CAUTION! The remote control is supplied with a battery inserted. An insulating foil between the battery and the battery contacts prevents the battery from being discharged during storage. Prior to the first operation remove the foil from the battery support on the rear side of the remote control. Otherwise operation of the remote control is not possible.

If the range of the remote control decreases, replace the battery. For this purpose, on the rear side of the remote control press the small bar with the groove to the right (1) and at the same time remove the battery support (2). For operation, one 3 V button cell type CR 2025 is required. When inserting, pay attention that the positive pole of the button cell shows upwards in the support.

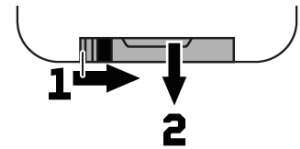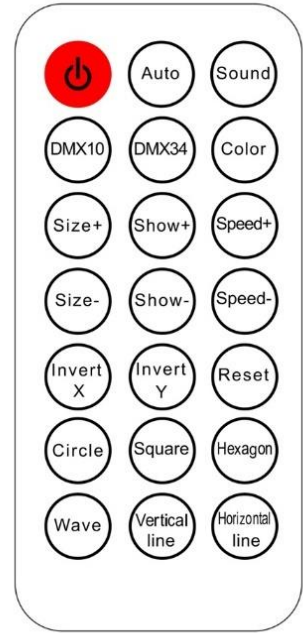

DMX CHANNELS

10 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	ON/OFF	000	Laser off
		001-255	Laser ON (Brightness from 1% to 100%)
2	STROBE	001-255	Strobe speed, from slow to fast
3	PATTERN SIZE	000-255	Select pattern size
4	X AXIS POSITION	000-255	Change X position, value 128 is the middle position (valid only when CH3 is selected 1-255)
5	Y AXIS POSITION	000-255	Change Y position, value 128 is the middle position (valid only when CH3 is selected 1-255)
6	SELECT SHOW	000-255	Select a show for every 2 values (CH9 selected a show list)
7	COLOR	000-63	Select single color
		064-095	Fixed color/color changing effect speed selection
		096-127	Color changing effect speed selection
		128-159	Color changing effect speed selection/flowing color effect speed selection
		160-191	Flowing color effect speed selection
		192-223	Flowing color effect speed selection
		224-255	Color drawing effect speed selection
8	LINE SCANNING	000-127	Scan speed selection
	DOT SCANNING	128-255	Scan speed selection
9	SHOW LIST	000-255	Select a show list every 8 values s (Value 0 selects all lists)
10	AUTO MODE	000-026	Default running speed of Auto Mode
		027-127	Select running speed (from slow to fast)
	MUSIC MODE	128-255	Select Mic Sensitivity for Music Mode (from high to low)

34 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	ON/OFF	000	Laser off
		001-255	Laser ON (Brightness from 1% to 100%)
2	STROBE	001-255	Strobe speed, from slow to fast
3	PATTERN SIZE	000-255	Select pattern size
4	X AXIS POSITION	000-255	Change X position, value 128 is the middle position (valid only when CH3 is selected 1-255)
5	Y AXIS POSITION	000-255	Change Y position, value 128 is the middle position (valid only when CH3 is selected 1-255)
6	SELECT SHOW	000-255	Select a show for every 2 values (CH9 selected a show list)
		000-63	Select single color
		064-095	Fixed color/color changing effect speed selection
		096-127	Color changing effect speed selection
		128-159	Color changing effect speed selection/flowing color effect speed selection
		160-191	Flowing color effect speed selection
		192-223	Flowing color effect speed selection
224-255	Color drawing effect speed selection		
8	LINE SCANNING	000-127	Scan speed selection
	DOT SCANNING	128-255	Scan speed selection
9	SHOW LIST	000-255	Select a show list every 8 values s (Value 0 selects all lists)
10	AUTO MODE	000-026	Default running speed of Auto Mode
		027-127	Select running speed (from slow to fast)
	MUSIC MODE	128-255	Select Mic Sensitivity for Music Mode (from high to low)
11	Z ROTATION	001-127	Select rotation angle
		128-255	Select rotation speed

12	X ROTATION	001-127	Select rotation angle
		128-255	Select rotation speed
13	Y ROTATION	001-127	Select rotation angle
		128-255	Select rotation speed
14	X MOVING	001-127	Select moving position
		128-255	Select moving speed
15	Y MOVING	001-127	Select moving position
		128-255	Select moving speed
16	ZOOMING	001-127	Select zooming size
		128-255	Select zooming speed
17	DRAWING	001-255	Select drawing speed
18	X WAVE	001-127	Select X waving speed
	Y WAVE	128-255	Select Y waving speed
CH19-34 IS VALID FOR PATTERN 2 (CH26 TO CHOOSE A SHOW LIST, AND CH23 TO CHOOSE A SHOW)			
19	STROBE	001-255	Strobe speed, from slow to fast
20	PATTERN SIZE	000-255	Select pattern size
21	X AXIS POSITION	000-255	(valid only when CH3 is selected 1-255) (valid only when CH3 is selected 1-255)
22	Y AXIS POSITION	000-255	Change Y position, value 128 is the middle position
23	SELECT SHOW	000-255	Select a show for every 2 values (CH26 selected a show list)
24	COLOR	000-063	Select single color
		064-095	Fixed color/color changing effect speed selection
		096-127	Color changing effect speed selection
		128-159	Color changing effect speed selection/flowing color effect speed selection
		160-191	Flowing color effect speed selection
		192-223	Flowing color effect speed selection
25	LINE SCANNING	000-127	Scan speed selection
	DOT SCANNING	128-255	Scan speed selection
26	SHOW LIST	000-255	Select a show list every 8 values (Value 0 selects all lists)
27	Z ROTATION	001-127	Select rotation angle
		128-255	Select rotation speed
28	X ROTATION	001-127	Select rotation angle
		128-255	Select rotation speed
29	Y ROTATION	001-127	Select rotation angle
		128-255	Select rotation speed
30	X MOVING	001-127	Select moving position
		128-255	Select moving speed
31	Y MOVING	001-127	Select moving position
		128-255	Select moving speed
32	ZOOMING	001-127	Select zooming size
		128-255	Select zooming speed
33	DRAWING	001-255	Select drawing speed
34	X WAVE	001-127	Select X waving speed
	Y WAVE	128-255	Select Y waving speed



A series of horizontal dotted lines spanning the width of the page, intended for handwriting practice. There are 25 lines in total, evenly spaced from the top to the bottom of the page.





A series of horizontal dotted lines spanning the width of the page, intended for handwriting practice. There are 25 lines in total, evenly spaced from top to bottom.



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

